



INSTRUCTION MANUAL

Magnetic Wireless Charging Car Mount

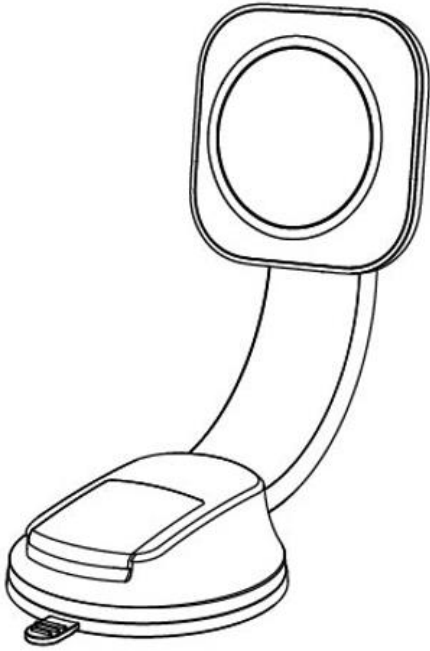

Wireless charging 15W (max.)
Qualcomm Quick Charge 3.0

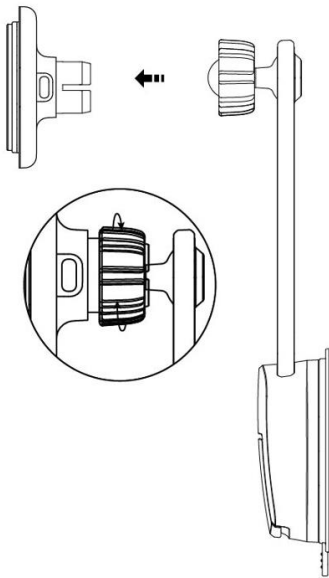

Qualcomm Quick Charge is a product of Qualcomm Technologies, Inc. Qualcomm is a trademark of Qualcomm incorporated, registered in the United States and other

countries. Quick Charge is a trademark of Qualcomm Incorporated. All Qualcomm Incorporated trademarks are used with permission.

HOW TO SET UP

1. Measure and clean the area
2. Remove tape cover
3. Attach the mount, press to make it stay
4. If the suction mount cannot be firmly attached to the car dashboard, you can use an adhesive dashboard pad to assist. Simply attach the adhesive pad between the car dashboard and the suction mount.

HOW TO CHARGE

- A. Connect the Type-C cable to the Q.Mag Mount. *
 - B. Snap on your Qi-compatible device onto the magnetic surface of the Q.Mag Mount.
 - C. Your device will start charging.
 - D. Turn ON the power button at the side of the charger plate.
- * Connect Q. Mag Mount to the car charger that equips with Qualcomm® Quick Charge™ 3.0 technology to maximize charging efficiency.

Indicator	Status
LED is ON in white	When connected to power
LED is ON in white at intervals for 2 secs and then OFF	Charging mode is ON

*NO LED signal when charging is completed

SPECIFICATION

Model: CM28

Input: 5V DC 3A, 9V DC 2A

Output: 15W

Operation temperature : 35 Degree celsius

Material : ABS + PC

Dimension : 74 x 74 x 43mm

Weight : 98g

CONTAINS:

1. Magnetic Wireless Charging Car Mount
2. USB-C to USB-C (1M)

WARNING

1. Do not dismantle or modify the product;
2. Do not store the product in wet conditions;
3. Do not keep or use the product near heat sources;
4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product;
5. Do not install the wireless car charger over an air bag cover or within the air bag deployment zone.
6. Make sure to remove metallic, magnetic protective case or chip cards like bank cards ,etc from your device when charging.
7. While charging, the charger may heat up. This is normal and should not affect charger's performance. If the charger feels hot to the touch during this charging process, remove the device from the charger and allow it to cool down before restarting the charging process;
8. Avoid using bent or damaged USB cable.

DISPOSAL OF ELECTRONIC PRODUCTS

1. Do not place the product as household waste;
2. Please dispose of discarded electronic products properly according to local regulations.
3. MOMAX encourages you to participate in electronics recycling program.

WARRANTY CONDITIONS

1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company;
2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;
3. This warranty card shall not apply to the product if:
 - (a) it has explicitly modified or repaired in any way by persons other than technicians of this company, or;
 - (b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or;
 - (c) losses or damages are caused by force majeure or natural disasters.
4. No alteration to this warranty card will be allowed;
5. The warranty terms and conditions are subject to change without prior notice;
6. Please retain your proof of purchase for warranty service;
7. Please consult the dealer about the product compatibility with your cell phone/ PDA before purchase. Product specifications are subject to change without prior notice;
8. Please visit www.momax.net for latest product information.