


MOMAX.

Q.Pad Fast Wireless Charger  
Q.Pad無線快速充電器  
Q.Pad无线快速充电器



The USB wall charger is not included  
包裝不包括數碼充電器  
包裝不包括數碼充電器

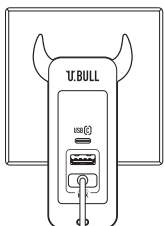

Welcome! Thank you for purchasing MOMAX product. All safety and operation instructions are suggested to read carefully before using the product.

### Q.Pad Fast Wireless Charger

#### Specification

Model: UD3  
Input Interface: Micro USB  
Output Interface: Wireless Charging (Qi)  
Input: 5V/2A, 9V/1.8A  
Output: 10W(Max.)  
Frequency: 110-205KHz  
Charging Distance: <math>\leq 10\text{mm}</math>  
Conversion: <math>\geq 72\%</math>(Max.)

#### Contains

1. Q.Pad
2. Micro USB cable (1m)
3. Instruction manual and warranty card

#### Instruction for Use

Q.Pad supports quick charge function and meets Qi wireless charging standard.

Short-range radio transmission is achieved by using magnetic induction. It provides wireless charging function for all the Qi standard electronic devices; Q.Pad supports 5W(Max.) loads when it connects to 5V output adapter. It supports 10W(Max.) loads under fast charging mode when it connects to QC2.0/QC3.0 adapter.

Built-in over-charging and over-voltage(10.6V) and short-circuit(1.8A) protection.

#### Setup:

1. Plug micro USB into the port of Q.Pad;
2. Connect the other end of micro-USB with the charger and plug it to the power supply;
3. Place your Qi-certified device on top of Q.Pad. The indicator light turns "BLUE" when it starts charging your device.

#### Indicator light:

- BLUE
1. Flash twice and turn off: Standby mode
  2. Solid: Charging in progress

### Warning

1. Do not dismantle or modify the product;
2. Do not store the product in wet conditions;
3. Do not keep or use the product near heat sources;
4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product.
5. Make sure to remove metallic or magnetic protective case of your device when charging;
6. While charging, the Q.Pad may heat up. This is normal and should not affect Q.Pad's performance. If the battery feels hot to the touch during this charging process, remove the Q.Pad from the charger and allow it to cool down before restarting the charging process;
7. Avoid using bent or damaged USB cable.

### Disposal of Electronic Products

1. Do not place the product as household waste;
2. Please dispose of discarded electronic products properly according to local regulations;
3. MOMAX encourages you to participate in electronics recycling program.

### Warranty Conditions

1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for free-of-charge repairing in 12 months from the date of purchase at the discretion of our company;
2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;
3. This warranty card shall not apply to the product if:
  - (a) it has explicitly modified or repaired in any way by persons other than

technicians of this company, or;

- (b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or;
- (c) losses or damages are caused by force majeure or natural disasters.

4. No alteration to this warranty card will be allowed;
5. The warranty terms and conditions are subject to change without prior notice;
6. Please retain your proof of purchase for warranty service;
7. Please consult the dealer about the product compatibility with your cell phone/PDA before purchase. Product specifications are subject to change without prior notice;
8. Please visit [www.momax.net](http://www.momax.net) for latest product information.

歡迎! 感謝您購買及使用 MOMAX 產品, 為確保本產品為您的手機或電子產品提供更好的操作效果, 除閱讀本用戶說明書同時也請參閱您的手機或電子產品使用指南。

### Q.Pad無線快速充電器

#### 產品規格

型號: UD3  
輸入介面: Micro USB  
輸出介面: 無線充電 (Qi)  
輸入: 5V/2A, 9V/1.8A  
輸出: 10W (Max.)  
頻率: 110-205KHz  
充電距離: <math>\leq 10\text{mm}</math>  
轉換率: <math>\geq 72\%</math> (Max.)

#### 包裝內容

1. Q.Pad
2. Micro USB 數據線 (1米)
3. 保證書及使用說明書

### 使用說明

Q.Pad 支持快速無線充電功能, 符合 Qi 無線充電標準; 通過磁感應方式實現短距離無線電能傳輸, 凡符合 Qi 標準的電子設備都可以使用 Q.Pad 進行充電;

使用 5V 輸出的適配器時, 無線充電器支持 5W 負載。使用符合 QC2.0/QC3.0 標準的適配器時, 無線充電器支持 10W 負載; 設有過充保護, 過壓保護 (10.6V) 及過流保護 (1.8A)。

#### 安裝:

1. 將 Q.Pad 連接到 micro USB 數據線的 micro USB 接頭;
2. 將 micro USB 數據線另一端的 USB-A 連接到電源;
3. 只需將兼容 Qi 的電子設備放在 Q.Pad 上, 藍色 LED 指示燈亮起代表充電進行中。

#### LED 指示燈:

- 藍燈
1. 閃爍 2 次後熄滅: 待機狀況。
  2. 長亮: 充電中。

### 警告


1. 請勿自行拆卸或改裝本產品;
2. 請勿將本產品存放在潮濕環境中;
3. 請勿將產品靠近熱源;
4. 請勿將水或其它液體流入本產品內部, 導致本產品損壞;

如有您有額外使用金屬或包含磁片的保護殼, 請確保充電前須移除;

充電時, Q.Pad 有可能產生熱力, 此乃正常現象, 並不會影響產品表現, 但如果感到手機電池或 Q.Pad 過熱, 請斷開 Q.Pad 電源供應, 待冷卻後, 再嘗試充電;

#### 如何處理廢棄電子產品

1. 請勿將電子產品當成家庭廢棄物丟棄;
2. 請依當地的法規規定處理廢棄的電子產品;

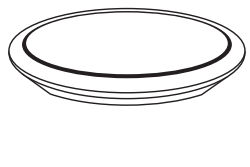

Instruction Manual  
使用說明 / 使用說明

2017 Dec 11

### 3. MOMAX 鼓勵您積極參與電子產品回收計劃。

#### 保養條款

1. 由購買日期起 12 個月內, 如產品有損壞或故障, 經本公司技術人員證實為在正常使用之情況下發生, 本公司將提供免費維修服務;
2. 維修時必須出示本保證書及購買商號之發票正本, 如果用戶不能提供, 本公司有權不提供維修服務。用戶可能需要支付相關維修費用;
3. 保用期內, 出現以下條款產品保用證自動失效:
  - (a) 非本公司人員同意拆解或維修產品之任何部分;
  - (b) 錯誤的操作如: 非法接駁電源, 以及水、污穢物滲入產品內導致產品損壞;
  - (c) 不可抗拒意外事件或天然災害導致產品損壞;
4. 此保用證不經塗改, 保用證自動失效;
5. 本公司有權權刪任何維修及

保用條款而不作通知;

6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞, 本公司不會承擔任何責任;
7. 有關 MOMAX 原裝產品和您的手機或電子產品的相容性, 請在購買時向經銷商確認。此產品規格隨時可能變更, 恕不另行通知;
8. 請瀏覽 [www.momax.net](http://www.momax.net) 瞭解最新產品資訊。

### 歡迎! 感謝您購買及使用 MOMAX 產品, 為確保本產品為您的手機或電子產品提供更好的操作效果, 除閱讀本用戶說明書同時也請參閱您的手機或電子產品使用指南。

#### Q.Pad 无线快速充电器

#### 产品规格

型号: UD3  
输入介面: Micro USB  
输出介面: 无线充电 (Qi)  
输入: 5V/2A, 9V/1.8A  
输出: 10W (Max.)  
频率: 110-205KHz  
充电距离: <math>\leq 10\text{mm}</math>  
转换率: <math>\geq 72\%</math> (Max.)

#### 包装内容

1. Q.Pad
2. Micro USB 数据线 (1米)
3. 保证书及使用说明书

LED 指示灯:  
蓝灯

1. 闪烁 2 次后熄灭: 待机状况。
2. 长亮: 充电中。

### 使用说明

Q.Pad 支持快速无线充电功能, 符合 Qi 无线充电标准; 通过磁感应方式实现短距离无线电能传输, 凡符合 Qi 标准的电子设备都可以使用 Q.Pad 进行充电;

使用 5V 输出的适配器时, 无线充电器支持 5W 负负载。使用符合 QC2.0/QC3.0 标准的适配器时, 无线充电器支持 10W 负负载; 设有过充保护, 过压保护 (10.6V) 及过流保护 (1.8A)。

#### 安装:

1. 将 Q.Pad 连接到 micro USB 数据线的 micro USB 接头;
2. 将 micro USB 数据线另一端的 USB-A 连接到电源;
3. 只需将兼容 Qi 的电子设备放在 Q.Pad 上, 蓝色 LED 指示灯亮起代表充电进行中。

### 警告

1. 请勿自行拆卸或改裝本產品;
2. 請勿將本產品存放在潮濕環境中;
3. 請勿將產品靠近熱源;
4. 請勿將水或其它液體流入本產品內部, 導致本產品損壞;
5. 如您有額外使用金屬或包含磁片的保護殼, 請確保充電前須移除;
6. 充電時, Q.Pad 有可能產生熱力, 此乃正常現象, 並不會影響產品表現。但如果感到手機電池或 Q.Pad 過熱, 請斷開 Q.Pad 電源供應, 待冷卻後, 再嘗試充電;
7. 避免使用屈曲或損壞的 USB 线材。

#### 如何处理废弃电子产品

1. 請勿將電子產品當成家庭廢棄物丟棄;
2. 請依當地的法規規定處理廢棄的電子產品;

### 3. MOMAX 鼓勵您積極參與電子產品回收計劃。

#### 保养条款

1. 由購買日期起 12 個月內, 如產品有損壞或故障, 經本公司技術人員證實為在正常使用之情況下發生, 本公司將提供免費維修服務;
2. 維修時必須出示本保證書及購買商號之發票正本, 如果用戶不能提供, 本公司有權不提供維修服務。用戶可能需要支付相關維修費用;
3. 保用期內, 出現以下條款產品保用證自動失效:
  - (a) 非本公司人員同意拆解或維修產品之任何部分;
  - (b) 錯誤的操作如: 非法接駁電源, 以及水、污穢物滲入產品內導致產品損壞;
  - (c) 不可抗拒意外事件或天然災害導致產品損壞;
4. 此保用證不經塗改, 保用證自動失效;
5. 本公司有權權刪任何維修及

保用條款而不作通知;

如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞, 本公司不會承擔任何責任;

有關 MOMAX 原裝產品和您的手機或電子產品的相容性, 請在購買時向經銷商確認。此產品規格隨時可能變更, 恕不另行通知;

請瀏覽 [www.momax.net](http://www.momax.net) 瞭解最新產品資訊。

#### Warranty/保用證/保用证

Model/型號/型号: \_\_\_\_\_

Date of Purchase/購買日期/购买日期: \_\_\_\_\_

Remarks/備註/备注: \_\_\_\_\_

#### Hong Kong and Macau:

Unit B, 2/F., Cheong Lung Building,  
10 Cheung Yee Street, Lai Chi Kok, Kowloon, Hong Kong  
Hotline: 852-24023186 E-Mail: [info@momax.net](mailto:info@momax.net)

#### 香港及澳門:

香港九龍荔枝角長義街10號昌隆大廈2樓B室  
服務熱線: 852-24023186 電郵: [info@momax.net](mailto:info@momax.net)

#### 中國:

羅米士科技(深圳)有限公司  
廣東省深圳市深南大道7006號万科富春東方大廈7樓  
郵編: 518000 全國服務熱線: 86-400-886-0010  
電郵: [info@momax.net](mailto:info@momax.net)

Copyright©2017 MOMAX Technology Ltd. All rights reserved.  
MOMAX is registered trademark of MOMAX Technology Ltd.  
All other trademarks are the property of their respective owners.

版權所有©2017 MOMAX Technology Ltd. 保留所有權利。  
MOMAX 是 MOMAX Technology Ltd 的註冊商標。所有其他商標均為其各自所有者的財產。

版權所有©2017 MOMAX Technology Ltd. 保留所有權利。  
MOMAX 是 MOMAX Technology Ltd 的註冊商標。所有其他商標均為其各自所有者的財產。



[www.momax.net](http://www.momax.net)