


INSTRUCTION MANUAL

使用说明 / 使用说明


momax

Q.CLOCK 5

Speaker Alarm Clock with Wireless Charging
無線充電電子鬧鐘連喇叭
无线充电氛围灯闹钟音箱

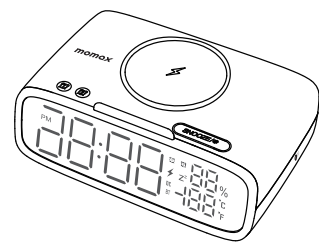

QC5

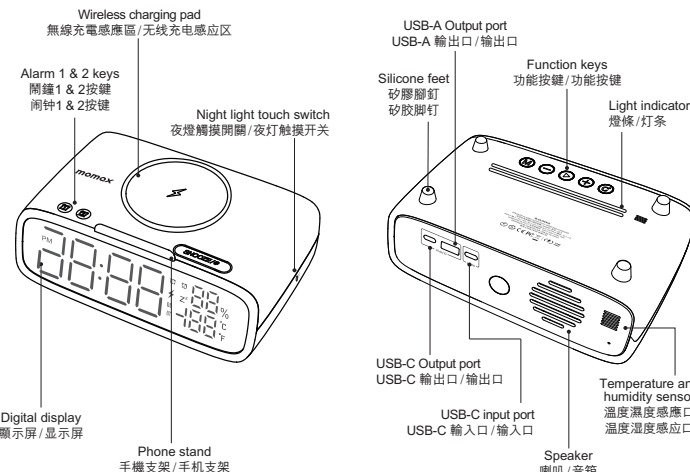

INSTRUCTION FOR USE

操作/操作

- 1. Insert the USB connector of the USB power cable into the power adapter, then insert the USB-C connector on the other end of USB power cable into the USB-C input port of the product.
2. After the product is powered, the charging icon "DC" will flash, and then it will remain on once fully charged.
3. Place your phone or device on top of the wireless charging pad with the rear of the phone towards the pad, ⚡ will be "steady on" and enter the charging state, the charging indicator will turn off once fully charged.


- 1. 將USB數據線的USB端口接入電源適配器，USB-C端口接入產品的USB-C輸入口。
2. 產品通電後，充電圖示"DC"閃爍，充滿電後常亮。
3. 將需要充電的手機或設備放在本產品無線充電感應區，⚡圖示常亮並進入充電狀態，充滿電後充電圖示將會熄滅。

*This product cannot charge other wired or wireless devices when the product is not connected to the power adapter.
本產品沒有接入電源適配器的情況下無法為其他產品進行有線/無線充電
本產品沒有接入電源適配器的情況下無法為其他產品進行有線/無線充電



Night light touch function 夜燈觸摸功能 / 夜灯触摸功能

- Short press to turn on/off the night light.
- Long press to adjust the brightness of the night light.
- When the alarm rings, it rings once every 10 minutes, a total of 4 times. Long press the snooze button to stop the alarm clock, short press the snooze button or tap the night light touch switch to snooze, and the snooze duration is 5 minutes.

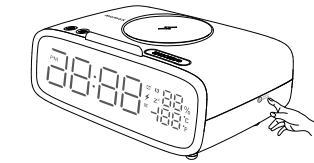

TOUCH ON/OFF

How to use the speakers 喇叭的使用方法 / 音箱的使用方法

Long press, there will be a prompt, then the Wireless function will be turned on.

In the state of Wireless pairing, turn on the Wireless function of your mobile phone and search for the speaker which will show "MOMAX QC5" at your phone's pairing list, click and select "MOMAX QC5" will start the pairing, there will be a prompt after the pairing is successful.

Long press again to turn off the Wireless function.

When the speaker is playing

- 1. Short press play/pause. Double press Wireless disconnect, long press again to restore the Wireless connection.
2. Short press reduce the volume; long press switch to the previous song.
3. Short press increase the volume; long press switch to the next song.

長按，有提示音，無線功能打開，處於準備配對狀態，此時打開您手機的無線功能，在無線設備中，

搜索出現 "MOMAX QC5" 字樣，點擊選中 "MOMAX QC5" 設備名稱；自動進入配對，配對連接成功後，會有提示音。

再次長按，無線功能退出。


- 在喇叭播放狀態時
1. 短按 播放/暫停。
雙擊 斷開連接，再次長按恢復連接。
2. 短按 減少音量；長按 切換上一曲。
3. 短按 增加音量；長按 切換下一曲。

長按，有提示音，無線功能打開，處於準備配對狀態，此時打開您手機的無線功能，在無線設備中，

再次長按，無線功能退出。

- 在音響播放狀態時
1. 短按 播放/暫停。
双击 断开连接，再次长按恢复连接。
2. 短按 减少音量；长按 切换上一曲。
3. 短按 增加音量；长按 切换下一曲。

Function keys 功能按鍵 / 功能按鍵



Alarm clock 鬧鐘開關 / 闹钟开关
Display brightness 屏幕亮度 / 屏幕亮度

Connect Wireless Speaker / Pause / Play 連接無線喇叭 / 暫停 / 播放
連接無線音響 / 暫停 / 播放

Down/Reduce volume 向下/減少 / 向下/減少
Up/Increase volume 向上/增加 / 向上/增加

Mode / 模式
Temperature / 溫度



(Alarm clock)
- Short press to turn on or off the alarm.
The alarm icon displayed at the digital display shows the active state of the alarm clock.

When the alarm rings, it rings once every 10 minutes, a total of 4 times. Long press the snooze button or tap the night light touch switch to snooze, and the snooze duration is 5 minutes.

(Display brightness)
- Short press to adjust display brightness, high/medium/low/off repeats in sequence.

(Mode)
- Short press to set/time and minute adjustment - clock -> alarm 1 -> alarm 2 -> 12/24 hour format -> year -> month/day. Long press to return to the clock interface.

On the clock interface, long press to display the clock/date cycle, Long press again to close the settings and display the clock.

(Reduce the number)
- Short press in adjustment mode to reduce the number, and long press to quickly reduce the number.

(Increase the number)
- In adjustment mode, short press to increase the number, long press to quickly increase the number.

(Temperature)
- Short press to switch between Celsius (°C) / Fahrenheit (°F).



www.momax.net

(鬧鐘)
- 短按 打開或關閉鬧鐘。
顯示屏顯示的鬧鐘圖示為鬧鐘生效狀態。
鬧鐘響開時，每10分鐘響一次，共4次。
長按 鍵鬧鐘停止，短按 鍵或輕拍夜燈觸摸開關可延遲響鬧，延遲時長5分鐘。

(螢幕亮度)
- 短按 調節螢幕亮度，高/中/低/關閉依次重複。

(模式)
- 短按 設置/時分調節一小時一開鈴一開鈴2-12/24小時制一年一月/日。長按 恢復到時鐘介面。
時鐘介面下長按 循環顯示時鐘/日期，再次長按關閉設置並顯示時鐘。

(增加)
- 調整模式下短按 增加數字，長按 快速增加數字。

(溫度)
- 短按 切換攝氏溫度(°C) / 華氏溫度(°F)。

(鬧鐘)
- 調整模式下短按 增加數字，長按 快速增加數字。
顯示屏顯示的鬧鐘圖示為鬧鐘生效狀態。
兩鈴響開時，每10分鐘響一次，共4次。
長按 鍵鬧鐘停止，短按 鍵或輕拍夜燈觸摸開關可延遲響鬧，延遲時長5分鐘。

(增加)
- 調整模式下短按 增加數字，長按 快速增加數字。

(溫度)
- 短按 切換攝氏溫度(°C) / 華氏溫度(°F)。

(減少)
- 調整模式下短按 減少數字，長按 快速減少數字。

(增加)
- 調整模式下短按 增加數字，長按 快速增加數字。

(溫度)
- 短按 切換攝氏溫度(°C) / 華氏溫度(°F)。

(鬧鐘)
- 調整模式下短按 增加數字，長按 快速增加數字。
顯示屏顯示的鬧鐘圖示為鬧鐘生效狀態。
兩鈴響開時，每10分鐘響一次，共4次。
長按 鍵鬧鐘停止，短按 鍵或輕拍夜燈觸摸開關可延遲響鬧，延遲時長5分鐘。

(增加)
- 調整模式下短按 增加數字，長按 快速增加數字。

(溫度)
- 短按 切換攝氏溫度(°C) / 華氏溫度(°F)。

(減少)
- 調整模式下短按 減少數字，長按 快速減少數字。

(增加)
- 調整模式下短按 增加數字，長按 快速增加數字。

(溫度)
- 短按 切換攝氏溫度(°C) / 華氏溫度(°F)。

(減少)
- 調整模式下短按 減少數字，長按 快速減少數字。

SPECIFICATION

產品規格 / 产品规格

Table with 2 columns: Specification and Value. Includes Capacity (2000mAh), USB-C Output (5V=3A, 9V=2A), USB-A Output (5V=1A), Multi-way Output (Max 20W), Speaker Power (4Q5W), Lamp Power (0.5W), Material (ABS), Size (185*117*62mm), Weight (542g±10g).

CONTAINS:

- 1. Q.CLOCK 5 Speaker Alarm Clock with Wireless Charging
2. USB-C to USB-A cable (1.0m)
3. Instruction manual and warranty card

Table with 2 columns: Specification and Value. Includes Capacity (2000mAh), USB-C Output (5V=3A, 9V=2A), USB-A Output (5V=1A), Multi-way Output (Max 20W), Speaker Power (4Q5W), Lamp Power (0.5W), Material (ABS), Size (185*117*62mm), Weight (542g±10g).

包裝內容:

- 1. Q.CLOCK 5 無線充電電子鬧鐘連喇叭
2. USB-C 到 USB-A 連接線 (1.0m)
3. 使用說明書及保用證

Table with 2 columns: Specification and Value. Includes Capacity (2000mAh), USB-C Output (5V=3A, 9V=2A), USB-A Output (5V=1A), Multi-way Output (Max 20W), Speaker Power (4Q5W), Lamp Power (0.5W), Material (ABS), Size (185*117*62mm), Weight (542g±10g).

包裝內容:

- 1. Q.CLOCK 5 无线充电氛围灯闹钟音箱
2. USB-C 到 USB-A 连接線 (1.0m)
3. 使用说明书及保用证

Warning

- 1. Do not dismantle or modify the product;
2. Do not store the product in wet conditions;
3. Do not keep or use the product near heat sources;
4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product.
5. While charging, the product may heat up. This is normal and should not affect product's performance. If the battery feels hot to the touch during this charging process, remove the product from the charger and allow it to cool down before restarting the charging process;
7. Avoid using bent or damaged USB cable.

Disposal of Electronic Products

- 1. Do not place the product as household waste;
2. Please dispose of discarded electronic products properly according to local regulations.
3. MOMAX encourages you to participate in electronics recycling program.

Warranty Conditions

- 1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company;
2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;

How to use the speakers

- 3. This warranty card shall not apply to the product if:
(a) it has explicitly modified or repaired in any way by persons other than technicians of this company, or;
(b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or;
(c) losses or damages are caused by force majeure or natural disasters.
4. No alteration to this warranty card will be allowed;
5. The warranty terms and conditions are subject to change without prior notice;
6. Please retain your proof of purchase for warranty service;
7. Please consult the dealer about the product compatibility with your cell phone/ PDA before purchase. Product specifications are subject to change without prior notice;
8. Please visit www.momax.net for latest product information.

警告

- 1. 請勿自行拆開或改裝本產品；
2. 請勿將本產品存放在潮濕環境中；
3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
5. 如您在額外使用金屬或包含磁片的保護殼，請確保充電前須移除；
6. 充電時，產品有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手機電池或產品過熱，請斷開產品電源供應，待冷卻後，再嘗試充電；
7. 避免使用屈曲或損壞的USB線材。

如何處理廢棄電子產品

- 1. 請勿將電子產品當成家庭廢棄物丟棄；
2. 請依當地的法規規定處理廢棄的電子產品；
3. MOMAX鼓勵您積極參與電子產品回收計劃。

保養條款

- 1. 由購買日期起12個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務；
2. 維修時必須出示本保用證及購買商號之發票正本，如果用戶不能提供，本公司有權不提供維修服務。用戶可能需要支付相關維修費用；
3. 保用期內，出現以下條款產品保用證自動失效：
(a) 非本公司人員恣意拆解或維修產品之任何部分；
(b) 錯誤的操作如：非法接駁電源，以及水、污穢物滲入產品內導致產品損壞；
(c) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經塗改，保用證自動失效；
5. 本公司有權增刪任何維修及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
7. 有關 MOMAX 原裝產品和您的手機或電子產品的相容性，請在購買時向經銷商確認。此產品規格隨時可能變更，恕不另行通知；
8. 請瀏覽 www.momax.net 瞭解最新產品資訊。

保用條款

- 1. 由購買日期起12個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務；
2. 維修時必須出示本保用證及購買商號之發票正本，如果用戶不能提供，本公司有權不提供維修服務。用戶可能需要支付相關維修費用；
3. 保用期內，出現以下條款產品保用證自動失效：
(a) 非本公司人員恣意拆解或維修產品之任何部分；
(b) 錯誤的操作如：非法接駁電源，以及水、污穢物滲入產品內導致產品損壞；
(c) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經塗改，保用證自動失效；

如何處理廢棄電子產品

- 2. 請勿將本產品存放在潮濕環境中；
3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
5. 如您在額外使用金屬或包含磁片的保護殼，請確保充電前須移除；
6. 充電時，產品有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手機電池或產品過熱，請斷開產品電源供應，待冷卻後，再嘗試充電；
7. 避免使用屈曲或損壞的USB線材。

保用條款

- 2. 請勿將本產品存放在潮濕環境中；
3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
5. 如您在額外使用金屬或包含磁片的保護殼，請確保充電前須移除；
6. 充電時，產品有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手機電池或產品過熱，請斷開產品電源供應，待冷卻後，再嘗試充電；
7. 避免使用屈曲或損壞的USB線材。

Warranty Conditions

- 2. 請勿將本產品存放在潮濕環境中；
3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
5. 如您在額外使用金屬或包含磁片的保護殼，請確保充電前須移除；
6. 充電時，產品有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手機電池或產品過熱，請斷開產品電源供應，待冷卻後，再嘗試充電；
7. 避免使用屈曲或損壞的USB線材。

保用條款

- 2. 請勿將本產品存放在潮濕環境中；
3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
5. 如您在額外使用金屬或包含磁片的保護殼，請確保充電前須移除；
6. 充電時，產品有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手機電池或產品過熱，請斷開產品電源供應，待冷卻後，再嘗試充電；
7. 避免使用屈曲或損壞的USB線材。

Table with 2 columns: Component Name and RoHS/REACH status. Includes PCB, Solder, Lead, Silver, Nickel, Copper, Tin, and other materials.

Copyright © 2023 MOMAX Technology Ltd. All rights reserved. MOMAX is registered trademark of MOMAX Technology Ltd. All other trademarks are the property of their respective owners. MOMAX is a registered trademark of MOMAX Technology Ltd. MOMAX is a registered trademark of MOMAX Technology Ltd. MOMAX is a registered trademark of MOMAX Technology Ltd.



momax WARRANTY/保用證/保用证
Model/型號/型号:
Date of Purchase/購買日期/购买日期:
Remarks/備註/备注:
Customer Service/客戶服務中心/客户服务中心
Hong Kong and Macau:
Unit A, 4/F., Cheung Lung Ind. Bldg., 10 Cheung Yee Street, Lai Chi Kok, Kowloon, Hong Kong
Hotline: 852-2402 3186 E-Mail: info@momax.net
香港及澳門:
香港九龍荔枝角長義街10號昌隆大廈4樓A室
服務熱線: 852-2402 3186 電郵: info@momax.net
中國內地:
摩米士科技(深圳)有限公司
廣東省深圳市深南大道7006號万科富春東方大廈7樓
郵編: 518000 全國服務熱線: 86-400-886-0010
電郵: info@momax.net.cn